


GROUP:	5B
FORM:	125-116AJ
FILE:	Alternator Parts List Section
DATE:	September, 1988


MODEL	VOLTS	AMPS
Various See Chart		

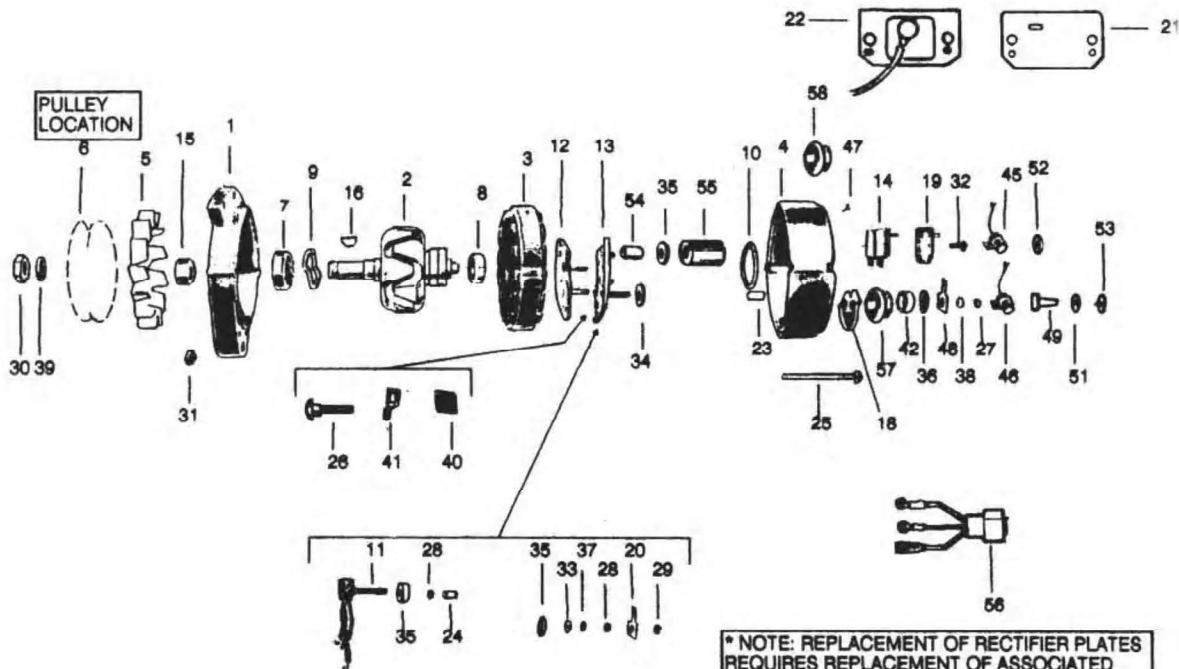

MODEL NO.	SALES NO.	1 HSNG FRONT	2 ROTOR ASSEM	3 STATOR ASSEM	4 HSNG MAIN	5 FAN	6 PULLEY	7 BRNG FRONT	8 BRNG REAR	9 FR.BRNG RET.	10 R.BRNG RET.	11 FIELD. DIODE	12 DIODE REC.NEG
8AL2051F	110-197	114-4	112-1	113-1	114-104	107-8	107-5	111-21	111-23	111-3	111-25	101-130	101-2
8AL2052K	110-198	114-4	112-2	113-19	114-104	107-8	107-5	111-21	111-23	111-3	111-25	101-130	101-2
8AL2053L	110-199	114-4	112-29	113-9	114-104	107-8	107-5	111-21	111-23	111-3	111-25	101-130	101-2
8AL2055F		114-55	112-1	113-1	114-104	107-8	107-77	111-21	111-23	111-3	111-25	101-130	101-2
8AL2058K		114-55	112-2	113-19	114-104	107-8	107-77	111-21	111-23	111-3	111-25	101-130	101-2
8AL2059K	110-701	114-4	112-2	113-19	114-104			111-21	111-23	111-3	111-25	101-130	101-2
8AL2060L	110-702	114-4	112-29	113-9	114-104			111-21	111-23	111-3	111-25	101-130	101-2
8AL2062L	110-731	114-150	112-45	113-39	114-149			111-21	111-23	111-3	111-25		101-126
8AL2063K	110-720	114-157	112-2	113-38	114-158	107-86	107-5	111-21	111-23	111-3	111-25		101-1*
8AL2065K	110-750	114-155	112-2	113-38	114-156	107-86	107-5	111-21	111-23	111-3	111-25		101-1*
8AL2067K		114-55	112-2	113-19	114-104	107-8	107-85	111-21	111-23	111-3	111-25	101-130	101-2
8AL2068F		114-55	112-1	113-1	114-104	107-8	107-85	111-21	111-23	111-3	111-25	101-130	101-2
8AL2069K		114-55	112-2	113-19	114-104	107-8	107-85	111-21	111-23	111-3	111-25	101-130	101-2
8AL2070L		114-150	112-45	113-39	114-149			111-21	111-23	111-3	111-25		101-126
8AL2071K	110-771	114-1	112-2	113-19	114-18	107-8	107-5	111-21	111-23	111-3	111-25		101-2
8AL2073K		114-4	112-2	113-19	114-104			111-21	111-23	111-3	111-25	101-130	101-2
8AL2074L		114-4	112-29	113-9	114-104			111-21	111-23	111-3	111-25	101-130	101-2
8AL2075K		114-157	112-2	113-38	114-158	107-86	107-5	111-21	111-23	111-3	111-25		101-2*
8AL2076K		114-155	112-2	113-38	114-156	107-86	107-5	111-21	111-23	111-3	111-25		101-2*
8AL2078K	110-778	114-172	112-2	113-41	114-92	107-8	107-5	111-21	111-23	111-3	111-25		101-173
8AL2080K	110-249	114-55	112-2	113-19	114-104			111-21	111-23	111-3	111-25	101-130	101-2
8AL2085K	110-778	114-185	112-2	113-41	114-156	107-9	107-93	111-21	111-23	111-3	111-25		101-173
8AL2086K	110-779	114-185	112-2	113-41	114-156	107-8	107-93	111-21	111-23	111-3	111-25		101-173
8AL2099K	110-746	114-157	112-2	113-41	114-184	107-8	107-89	111-21	111-23	111-3	111-25		101-173
8AL2100L	110-753	114-183	112-29	113-39	114-156	107-8	107-5	111-21	111-23	111-3	111-25		101-173

Important: The information contained in this bulletin is intended for use by trained, professional technicians who have the proper tools, equipment, and training to perform the required maintenance described above. This information is NOT intended for 'do-it-yourselfers', and you should not assume that this information applies to your equipment. If you have any questions regarding this information please visit our website at www.prestolite.com, or contact our technical service department at:

GROUP: 5B
FORM: 125-116AJ

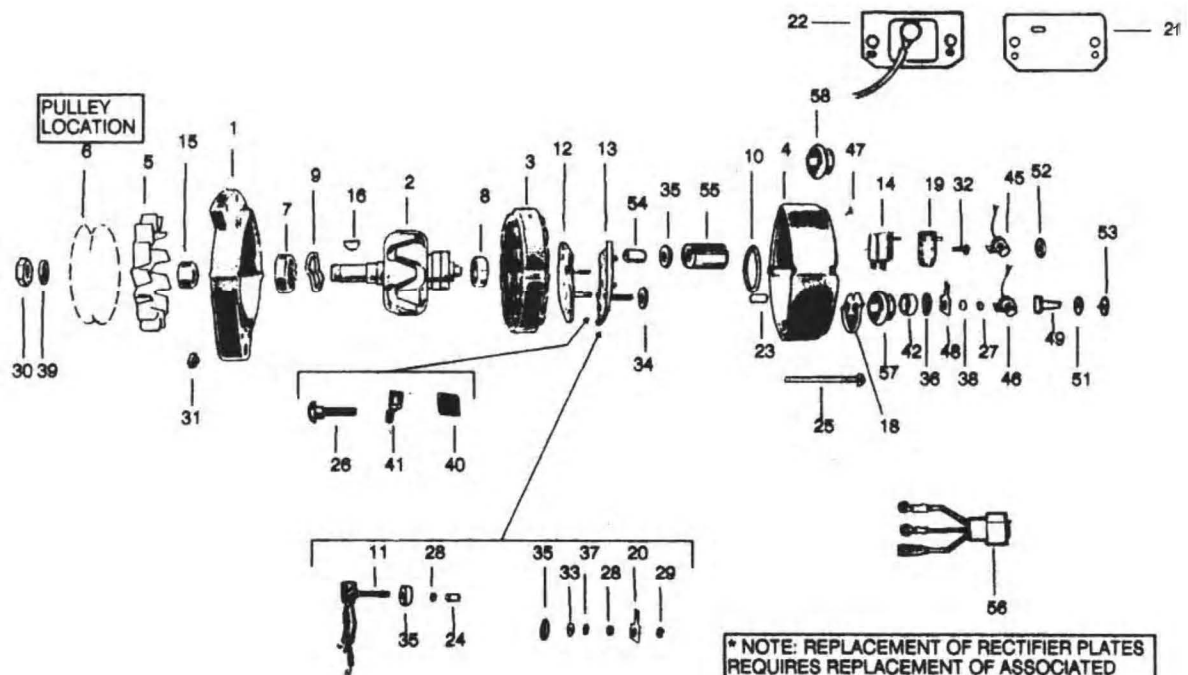

MODEL NO.	SALES NO.	13 DIODE REC.POS	14 BRUSH ASSEM	15 FAN&PUL SPACER	16 KEY WDRF.	17	18 DIODE ISOL	19 TERM. GND	20 TERM. SPADE	21 BRUSH COVER	22 BR CVR HOLDER	23 SLEEVE INSUL	24 SLEEVE INSUL
8AL2051F	110-197	101-171	103-15	120-152	120-7			118-43	116-86			115-26	115-27
8AL2052K	110-198	101-171	103-15	120-152	120-7			118-43	116-86			115-26	115-27
8AL2053L	110-199	101-171	103-15	120-152	120-7			118-43	116-86			115-26	115-27
8AL2055F		101-171	103-15	120-152	120-7				116-87	103-6		115-26	115-27
8AL2056K		101-171	103-15	120-152	120-7				116-87	103-6		115-26	115-27
8AL2059K	110-701	101-171	103-15	120-152	120-7			118-43	116-86			115-26	115-27
8AL2060L	110-702	101-171	103-15	120-152	120-7			118-43	116-86			115-26	115-27
8AL2062L	110-731	101-125	103-39	120-163							103-340	115-26	115-1
8AL2063K	110-720	101-171*	103-15	120-152	120-7					103-6		115-26	
8AL2065K	110-750	101-171*	103-15	120-152	120-7					103-6		115-26	
8AL2067K		101-171	103-15	120-152	120-7			118-43				115-26	115-27
8AL2068F		101-171	103-15	120-152	120-7			118-43				115-26	115-27
8AL2069K		101-171	103-15	120-152	120-7			118-43				115-26	115-27
8AL2070L		101-125	103-39	120-163	120-7						103-340	115-26	115-1
8AL2071K	110-771	101-1	103-15	120-152	120-7		101-30			103-5		115-1	
8AL2073K		101-171	103-15	120-152	120-7			118-43	116-86			115-26	115-27
8AL2074L		101-171	103-15	120-152	120-7			118-43	116-86			115-26	115-27
8AL2075K		101-171*	103-15	120-152	120-7					103-6		115-26	
8AL2076K		101-171*	103-15	120-152	120-7					103-6		115-26	
8AL2078K	110-776	101-172	103-15	120-152	120-7					103-6		115-26	115-21
8AL2080K	110-249	101-171	103-15	120-152	120-7					103-6		115-26	115-27
8AL2095K	110-778	101-172	103-15	120-152	120-7					103-6		115-26	
8AL2096K	110-779	101-172	103-15	120-152	120-7					103-6		115-26	
8AL2099K	110-746	101-189	103-15	120-152	120-7					103-6		115-26	115-21
8AL2100L	110-753	101-189	103-15	120-152	120-7					103-6		115-26	

Important: The information contained in this bulletin is intended for use by trained, professional technicians who have the proper tools, equipment, and training to perform the required maintenance described above. This information is NOT intended for 'do-it-yourselfers', and you should not assume that this information applies to your equipment. If you have any questions regarding this information please visit our website at www.prestolite.com, or contact our technical service department at:

GROUP: 5B
FORM: 125-116AJ

KEY NO.	SALES NO.	DESCRIPTION	BAL 2031F	BAL 2032K	BAL 2033L	BAL 2035F	BAL 2036K	BAL 2039K	BAL 2040L	BAL 2042L	BAL 2043K	BAL 2045K	BAL 2047K	BAL 2048F	BAL 2049K	BAL 2070L	BAL 2071K	BAL 2073K	BAL 2074L	BAL 2075K	BAL 2076K	BAL 2078K	BAL 2080K	BAL 2088K	BAL 2098K	BAL 2100L
BOLTS																										
25	120-1	THROUGH, 10-32 x 2-55/64"	4		4								4													
25	120-143	THROUGH, 10-32 x 3-1/8"		4		4	4				4	4	4	4		4	4	4	4	4	4	4	4	4	4	4
25	120-86	THROUGH, 10-32 x 3-5/16"			4				4	4						4		4								4
26	120-93	CARRIAGE, 10-24 x 1-1/2"							1	1	1			1					1	1						
26	120-290	CARRIAGE, M5 x .08 x 1.2"																			1					
26	120-306	CARRIAGE, M5 x .08 x 1.4"																					1	1	1	1
NUTS																										
27	120-342	HEX, 1/4-20 x 7/16"	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2
27	120-288	HEX, M5 X 0.8 - 6H																			3		4	4	4	4
28	120-34	HEX, 10-24 x 3/8"	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2
29	120-148	HEX LOCKNUT, 10-24 x 3/8"	5	5	5	5	5	5	5	5	5	5	5	5	5	5	5	5	5	5	5	5	5	5	5	5
29	120-289	HEX, M6 x 1.0 - 6H																			1					
30	120-136	PULLEY MTG., 5/8-18 x 15/16"	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1
31	120-150	SQUARE, 10-32 THRU BOLT MTG.	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4
SCREWS																										
32	120-102	TAPPING HEX, 8-32 x 1/2"	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2
47	120-208	TAPPING, 4-40 x 3/16"	2	2	2	2	2	2	2			2	2	2						2	2					
WASHERS																										
33	120-46	FLAT METAL, NO. 10	1	1	1	1	1	1	1	2	2	2	1	1	1	2	2	1	1	2	2	2	1	2	2	2
34	115-4	INSULATOR, 3/16 x 1/2" OD														2										
35	115-3	INSULATOR, NO. 10 X 3/4" OD	3	3	3	3	3	3	3	4	4	3	3	3	3	2	3	3	4	4	4	3	4	3	3	3
36	115-10	INSULATOR, 1/4" STUD X 3/4" OD	2	2	2	2	2	2	2	1	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2
37	120-111	SPLIT LOCK, NO. 10	3	3	3	3	3	3	3	4	4	3	3	3	3	2	3	3	4	4	4	3	4	3	3	3
38	120-113	SPLIT LOCK, 1/4"	2	2	2	2	2	2	2			2	2	2	2	1	2	2				2	2	2	2	2
39	120-137	SPLIT LOCK, 5/8"	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1
40	115-7	INSULATOR, 1/4" SQ. MOLDED							1	1	1					1	1				1		1	1	1	1
42	115-2	INSULATOR SLEEVE, 3/32"														1										
51	115-55	INSULATOR, .265 x .781 x .125							1							1										
52	115-56	INSULATOR, .203 x .640 x .125							1							1										
53	115-57	INSULATOR, .265 x .812 x .090							1							1										

Important: The information contained in this bulletin is intended for use by trained, professional technicians who have the proper tools, equipment, and training to perform the required maintenance described above. This information is NOT intended for 'do-it-yourselfers', and you should not assume that this information applies to your equipment. If you have any questions regarding this information please visit our website at www.prestolite.com, or contact our technical service department at:

SERVICE PARTS LIST

GROUP:	5B
FORM:	125-116AJ

KEY NO.	SALES NO.	DESCRIPTION	8AL2061F	8AL2052K	8AL2053L	8AL2055F	8AL2056K	8AL2059K	8AL2060L	8AL2062L	8AL2063K	8AL2065K	8AL2067K	8AL2068F	8AL2069K	8AL2070L	8AL2071K	8AL2073K	8AL2074L	8AL2075K	8AL2076K	8AL2078K	8AL2080K	8AL2086K	8AL2088K	8AL2089K	8AL2100L
MISC.																											
36	115-67	INSULATOR WASHER, .265 x .75 x .06																				2	2				
41	116-87	LUG TERMINAL								1	1									1	1						
45	102-26	CAPACITOR OUTPUT, .5mFd	1	1	1			1	1				1	1	1			1	1	1			1		1	1	
46	102-31	CAPACITOR, FIELD	1	1	1			1	1				1	1	1			1	1	1			1		1	1	
48	116-67	AUXILIARY TERMINAL CONNECTOR				1	1																	1			
49	120-287	CAP STUD				1	1																1	1	1	1	1
50	120-109	FLAT WASHER, 9/16 x 17/64 x 3/64"				1	1						1		1								1				
54	115-1	INSULATOR SLEEVE, NO. 10 x 19/32"								2	2									2				2	2		2
55	120-265	BUSHING, REAR SPLIT									1										1				1	1	
55	120-266	BUSHING, REAR SPLIT								1										1							
55	120-305	BUSHING, REAR SPLIT																									1
55	120-307	BUSHING, REAR SPLIT																								1	
56	116-112	CABLE ASSEMBLY								1										1							
56	116-111	CABLE ASSEMBLY									1										1	1		1	1		
56	116-121	CABLE ASSEMBLY																									1
56	116-122	CABLE ASSEMBLY																								1	
57	115-62	INSULATOR, RED							1							1											
58	115-63	INSULATOR, NATURAL								1						1											

Important: The information contained in this bulletin is intended for use by trained, professional technicians who have the proper tools, equipment, and training to perform the required maintenance described above. This information is NOT intended for 'do-it-yourselfers', and you should not assume that this information applies to your equipment. If you have any questions regarding this information please visit our website at www.prestolite.com, or contact our technical service department at: