


SERVICE PARTS LIST

| | |
|--------|-------------------------------|
| GROUP: | 8 |
| FORM: | 8HC |
| FILE: | Alternator Parts List Section |
| DATE: | August, 1999 |

| MODEL | VOLTS | AMPS |
|-------------------------|-------|------|
| Various See Chart | | |

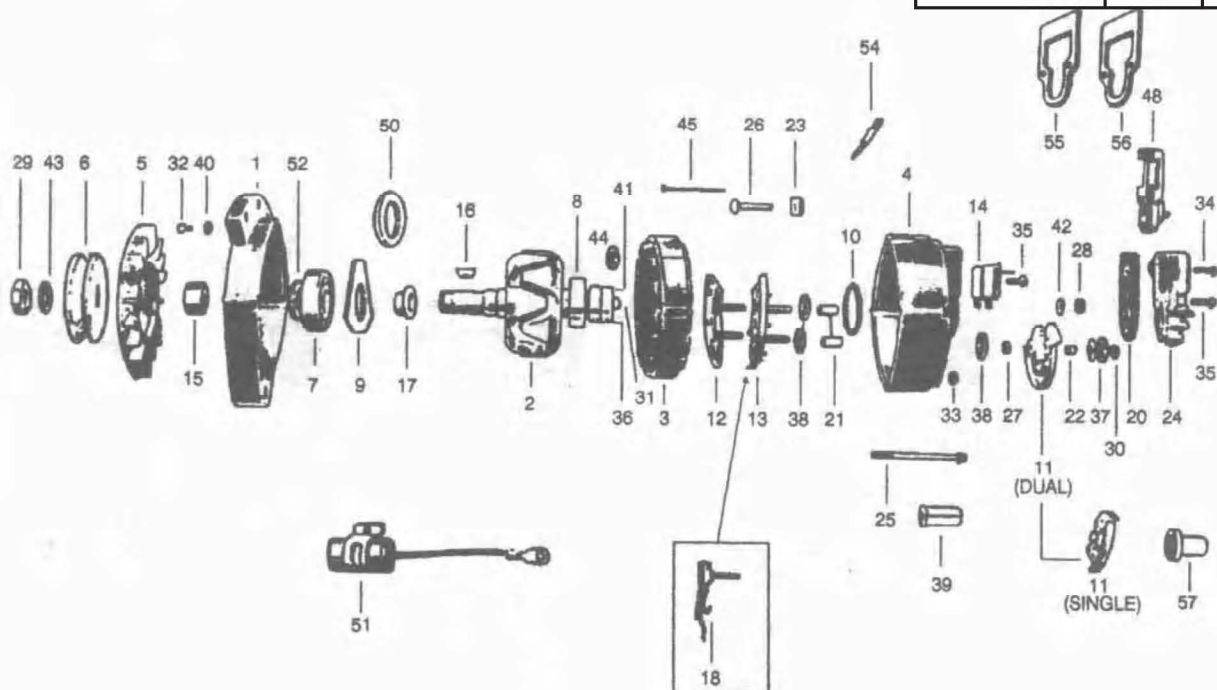


| MODEL NO. | SALES NO. | 1 HSNG FRONT | 2 ROTOR ASSEM | 3 STATOR ASSEM | 4 HSNG REAR | 5 FAN | 6 PULLEY | 7 BRNG FRONT | 8 BRNG REAR | 9 FR.BRNG RET. | 10 R.BRNG RET. | 11 ISOLA. DIODE | 12 DIODE RECT.NEG |
|-----------|-----------|--------------------|---------------------|----------------------|-------------------|----------|-------------|--------------------|-------------------|----------------------|----------------------|-----------------------|-------------------------|
| 8HC2001L | 110-109 | 114-44 | 112-28 | 113-4 | 114-68 | 107-44 | | 111-40 | 111-21 | 111-27 | 111-64 | 101-30 | 101-150 |
| 8HC2003P | 110-114 | 114-136 | 112-40 | 113-16 | 114-63 | 107-44 | | 111-40 | 111-21 | 111-27 | 111-64 | 101-70 | 101-148 |
| 8HC2004F | 110-186 | 114-86 | 112-21 | 113-1 | 114-63 | 107-44 | 107-62 | 111-40 | 111-21 | 111-27 | 111-64 | 101-30 | 101-148 |
| 8HC2005L | | 114-44 | 112-28 | 113-4 | 114-68 | 107-44 | | 111-40 | 111-21 | 111-27 | 111-64 | 101-30 | 101-18 |
| 8HC2007F | | 114-86 | 112-21 | 113-1 | 114-63 | 107-8 | 107-13 | 111-40 | 111-21 | 111-27 | 111-64 | | 101-197 |
| 8HC2008F | | 114-86 | 112-21 | 113-1 | 114-63 | 107-8 | | 111-40 | 111-21 | 111-27 | 111-64 | 101-30 | 101-148 |
| 8HC2009P | 110-205 | 114-118 | 112-40 | 113-16 | 114-72 | 107-44 | | 111-40 | 111-21 | 111-27 | 111-64 | | 101-148 |
| 8HC2012F | 110-206 | 114-135 | 112-21 | 113-1 | 114-151 | 107-44 | | 111-40 | 111-21 | 111-27 | 111-64 | | 101-18 |
| 8HC2013P | 110-209 | 114-135 | 112-40 | 113-16 | 114-151 | 107-44 | | 111-40 | 111-21 | 111-27 | 111-64 | | 101-148 |
| 8HC2014K | 110-210 | 114-135 | 112-28 | 113-19 | 114-151 | 107-44 | | 111-40 | 111-21 | 111-27 | 111-64 | | 101-18 |
| 8HC2015L | 110-212 | 114-135 | 112-40 | 113-9 | 114-151 | 107-44 | | 111-40 | 111-21 | 111-27 | 111-64 | | 101-148 |
| 8HC2018L | 110-230 | 114-136 | 112-40 | 113-9 | 114-151 | 107-44 | | 111-40 | 111-21 | 111-27 | 111-64 | | 101-148 |
| 8HC2021K | 110-267 | 114-44 | 112-28 | 113-19 | 114-151 | 107-44 | | 111-40 | 111-21 | 111-27 | 111-64 | | 101-197 |
| 8HC2023K | 110-284 | 114-44 | 112-28 | 113-19 | 114-198 | 107-44 | | 111-40 | 111-21 | 111-27 | 111-64 | | 101-197 |
| 8HC2024K | 110-312 | 114-44 | 112-28 | 113-19 | 114-198 | 107-44 | | 111-40 | 111-21 | 111-27 | 111-64 | | 101-197 |
| 8HC2027P | 110-404 | 114-246 | 112-40 | 113-16 | 114-245 | 107-44 | | 111-40 | 111-21 | 111-27 | 111-64 | | 101-213 |
| 8HC3002F | 110-193 | 114-16 | 112-27 | 113-5 | 114-63 | 107-44 | | 111-40 | 111-21 | 111-27 | 111-64 | 101-30 | 101-18 |
| 8HC3006F | 110-180 | 114-107 | 112-27 | 113-5 | 114-106 | 107-44 | 107-4 | 111-40 | 111-21 | 111-27 | 111-64 | | 101-197 |
| 8HC3010G | 110-196 | 114-86 | 112-34 | 113-30 | 114-151 | 107-44 | | 111-40 | 111-21 | 111-27 | 111-64 | | 101-18 |
| 8HC3017G | 110-222 | 114-136 | 112-34 | 113-30 | 114-151 | 107-44 | | 111-40 | 111-21 | 111-27 | 111-64 | | 101-18 |
| 8HC3022F | 110-285 | 114-44 | 112-27 | 113-5 | 114-151 | 107-44 | | 111-40 | 111-21 | 111-27 | 111-64 | | 101-197 |
| 8HC3025F | 110-313 | 114-44 | 112-27 | 113-5 | 114-151 | 107-44 | | 111-40 | 111-21 | 111-27 | 111-64 | | 101-197 |
| 8HC3026G | 110-392 | 114-232 | 112-34 | 113-30 | 114-151 | 107-44 | | 111-40 | 111-21 | 111-27 | 111-64 | | 101-209 |

Important: The information contained in this bulletin is intended for use by trained, professional technicians who have the proper tools, equipment, and training to perform the required maintenance described above. This information is NOT intended for 'do-it-yourselfers', and you should not assume that this information applies to your equipment. If you have any questions regarding this information please visit our website at www.prestolite.com, or contact our technical service department at:

SERVICE PARTS LIST

| | |
|--------|-----|
| GROUP: | 8 |
| FORM: | 8HC |

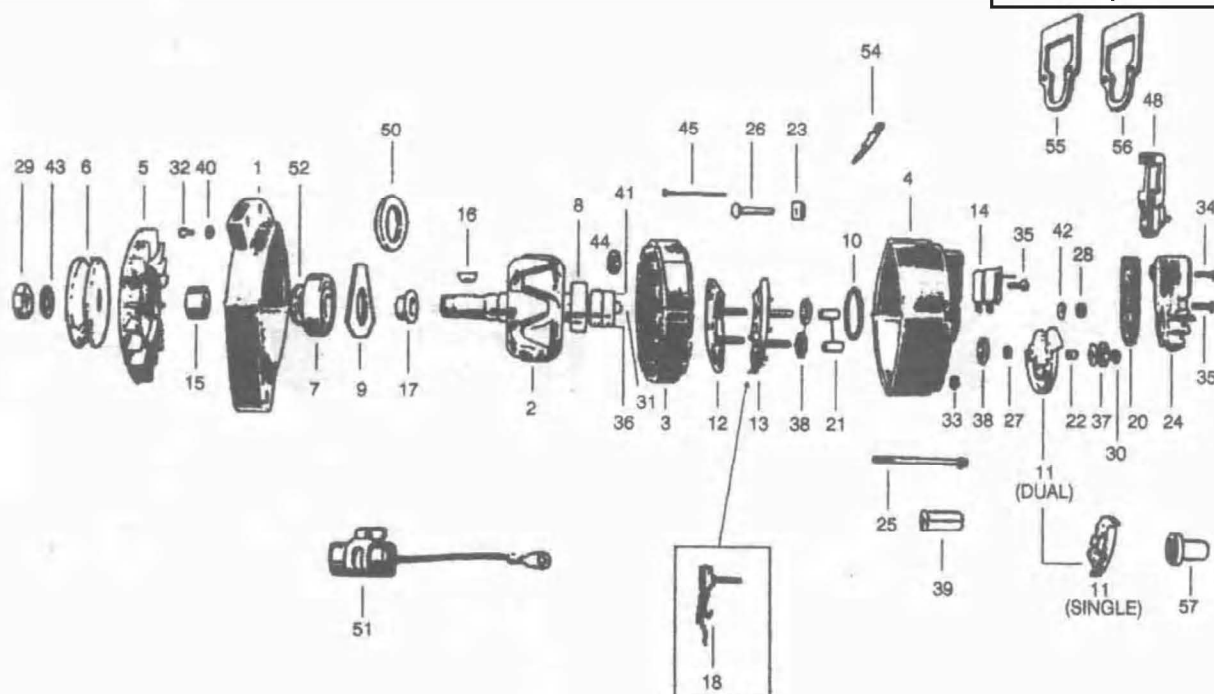

| MODEL NO. | SALES NO. | 13 DIODE RCT.POS. | 14 BRUSH ASSEM | 15 FAN SPACER | 16 WDRFF KEY | 17 SLEEVE SHAFT | 18 DIODE TRIO | 19 SLIP RING | 20 RING GASKET | 21 SLEEVE INSUL. | 22 SLEEVE INSUL. | 23 INSUL. MOLDED | 24 VOLT. REG. |
|-----------|-----------|-------------------|----------------|---------------|--------------|-----------------|---------------|--------------|----------------|------------------|------------------|------------------|---------------|
| 8HC2001L | 110-109 | 101-149 | 103-16 | 120-147 | 120-7 | 120-89 | | 112-22 | 103-14 | 115-1 | 115-2 | | 105-198 |
| 8HC2003P | 110-114 | 101-147 | 103-15 | 120-147 | 120-7 | 120-89 | | 112-22 | 103-14 | 115-1 | | | 105-181 |
| 8HC2004F | 110-186 | 101-46 | 103-15 | 120-147 | 120-7 | 120-89 | | 112-22 | 103-14 | 115-1 | 115-2 | 115-7 | 105-181 |
| 8HC2005L | | 101-50 | 103-15 | 120-147 | 120-7 | 120-89 | | 112-22 | 103-14 | 115-1 | 115-2 | | 105-197 |
| 8HC2007F | | 101-50 | 103-15 | 120-147 | 120-7 | 120-89 | | 112-22 | 103-14 | 115-1 | 115-2 | | 105-181 |
| 8HC2008F | | 101-50 | 103-15 | 120-147 | 120-7 | 120-89 | | 112-22 | 103-14 | 115-1 | 115-2 | | 105-181 |
| 8HC2009P | 110-205 | 101-137 | 103-16 | 120-147 | 120-7 | 120-89 | | 112-22 | 103-14 | 115-1 | | 115-7 | 105-203 |
| 8HC2012F | 110-208 | 101-98 | 103-15 | 120-147 | 120-7 | 120-89 | 101-130 | 112-22 | 103-14 | 115-21 | 115-26 | | 105-172 |
| 8HC2013P | 110-209 | 101-164 | 103-15 | 120-147 | 120-7 | 120-89 | 101-130 | 112-22 | 103-14 | 115-21 | 115-26 | | 105-172 |
| 8HC2014K | 110-210 | 101-98 | 103-15 | 120-147 | 120-7 | 120-89 | | 112-22 | 103-14 | 115-21 | 115-26 | | 105-172 |
| 8HC2015L | 110-212 | 101-164 | 103-15 | 120-147 | 120-7 | 120-89 | 101-130 | 112-22 | 103-14 | 115-21 | 115-26 | | 105-172 |
| 8HC2018L | 110-230 | 101-164 | 103-15 | 120-147 | 120-7 | 120-89 | 101-130 | 112-22 | 103-14 | 115-21 | 115-26 | | 105-172 |
| 8HC2021K | 110-267 | 101-196 | 103-12 | 120-147 | 120-7 | 120-89 | | 112-22 | 103-14 | 115-1 | 115-26 | 115-7 | 105-224 |
| 8HC2023K | 110-284 | 101-196 | 103-12 | 120-147 | 120-7 | 120-89 | | 112-22 | 103-14 | 115-1 | 115-26 | 115-7 | 105-245 |
| 8HC2024K | 110-312 | 101-196 | 103-12 | 120-147 | 120-7 | 120-89 | | 112-22 | 103-14 | 115-1 | 115-26 | 115-7 | 105-245 |
| 8HC2027P | 110-404 | 101-164 | 103-46 | 120-147 | 120-7 | 120-89 | | 112-22 | 103-14 | 115-21 | 115-26 | 115-7 | 105-200 |
| 8HC3002F | 110-193 | 101-46 | 103-16 | 120-147 | 120-7 | 120-89 | | 112-22 | 103-14 | 115-1 | 115-2 | 115-7 | 105-208 |
| 8HC3006F | 110-180 | 101-98 | 103-16 | 120-147 | 120-7 | 120-89 | 101-130 | 112-22 | 103-14 | 115-1 | 115-26 | 115-7 | 105-179 |
| 8HC3010G | 110-196 | 101-98 | 103-15 | 120-147 | 120-7 | 120-89 | 101-130 | 112-22 | 103-14 | 115-39 | 115-26 | | 105-149 |
| 8HC3017G | 110-222 | 101-98 | 103-15 | 120-257 | 120-7 | 120-89 | 101-130 | 112-22 | 103-14 | 115-21 | 115-26 | | 105-149 |
| 8HC3022F | 110-285 | 101-196 | 103-12 | 120-147 | 120-7 | 120-89 | | 112-22 | 103-14 | 115-39 | 115-26 | 115-7 | 105-247 |
| 8HC3025F | 110-313 | 101-196 | 103-12 | 120-147 | 120-7 | 120-89 | | 112-22 | 103-14 | 115-1 | 115-26 | 115-7 | 105-247 |
| 8HC3026G | 110-392 | 101-210 | 103-39 | 120-257 | 120-7 | 120-89 | 101-130 | 112-22 | 103-14 | 115-21 | 115-26 | | 105-273 |

Important: The information contained in this bulletin is intended for use by trained, professional technicians who have the proper tools, equipment, and training to perform the required maintenance described above. This information is NOT intended for 'do-it-yourselfers,' and you should not assume that this information applies to your equipment. If you have any questions regarding this information please visit our website at www.prestolite.com , or contact our technical service department at:

GROUP: 8
FORM: 8HC

| KEY NO. | SALES NO. | DESCRIPTION | 8HC2001L | 8HC2003P | 8HC2004F | 8HC2005L | 8HC2007F | 8HC2008F | 8HC2009P | 8HC2012F | 8HC2013P | 8HC2014K | 8HC2015L | 8HC2018L | 8HC2021 | 8HC2023K | 8HC2024K | 8HC2027P | 8HC3002F | 8HC3006F | 8HC3010G | 8HC3017G | 8HC3022F | 8HC3025F | 8HC3026G |
|----------------|-----------|------------------------------------|----------|----------|----------|----------|----------|----------|----------|----------|----------|----------|----------|----------|---------|----------|----------|----------|----------|----------|----------|----------|----------|----------|----------|
| BOLTS | | | | | | | | | | | | | | | | | | | | | | | | | |
| 25 | 120-1 | THROUGH, 10-32 x 2-55/64" | | | 4 | 4 | 4 | 4 | 4 | | | | | | | | | | | | | | | | |
| 25 | 120-143 | THROUGH, 10-32 x 3-1/8" | | | | | | | | | 4 | | | 4 | 4 | 4 | 4 | 4 | 4 | 4 | | | 4 | 4 | |
| 25 | 120-86 | THROUGH, 10-32 x 3-5/16" | 4 | 4 | | 4 | | | 4 | 4 | | | 4 | 4 | | | | 4 | | | 4 | 4 | | 4 | |
| 26 | 120-93 | CARRIAGE, 10-24 x 1-1/2" | | | 1 | | | 1 | 1 | | | | | | | 2 | 2 | 2 | 1 | 1 | 1 | | 2 | 2 | |
| NUTS | | | | | | | | | | | | | | | | | | | | | | | | | |
| 27 | 120-34 | HEX, 10-24 IRIDITE | 4 | 4 | 4 | 4 | 3 | 4 | 2 | 4 | 4 | 4 | 4 | 4 | 3 | 3 | 3 | 2 | 4 | 3 | 4 | 4 | 3 | 3 | 4 |
| 28 | 120-160 | HEX, 1/4-20 IRIDITE | 2 | 2 | 2 | 2 | 2 | 4 | 2 | 2 | 2 | 2 | 2 | 2 | 2 | 2 | 2 | 4 | 2 | 4 | 2 | 2 | 2 | 2 | |
| 29 | 120-136 | HEX PULLEY, 5/8-18 CAD | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 |
| 30 | 120-148 | HEX LOCK, 10-24 IRIDITE | 4 | 4 | 4 | 4 | 3 | 4 | 2 | 3 | 3 | 3 | 3 | 3 | 3 | 3 | 3 | 4 | 2 | 3 | 3 | 3 | 3 | 3 | |
| SCREWS | | | | | | | | | | | | | | | | | | | | | | | | | |
| 31 | 120-56 | CAP, 10-32 x 5/8" | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 |
| 32 | 120-141 | MACHINE, 8-32 x 3/8" IRIDITE | 3 | 3 | 3 | 3 | 3 | 3 | 3 | 3 | 3 | 3 | 3 | 3 | 3 | 3 | 3 | 3 | 3 | 3 | 3 | 3 | 3 | 3 | 3 |
| 34 | 120-102 | TAPPING, 8-32 x 1/2" IRIDITE | 2 | 2 | 2 | 2 | 2 | 2 | 2 | 2 | 2 | 2 | 2 | 2 | 2 | 2 | 2 | 2 | 2 | 2 | 2 | 2 | 2 | 2 | 2 |
| 35 | 120-117 | TAPPING, 8-32 x 3/4" IRIDITE | 4 | 4 | 4 | 4 | 4 | 4 | 4 | 4 | 4 | 4 | 4 | 4 | 4 | 4 | 4 | 4 | 4 | 4 | 4 | 4 | 4 | 4 | 4 |
| WASHERS | | | | | | | | | | | | | | | | | | | | | | | | | |
| 51 | 115-51 | INSULATOR, NO. 10 x 9/16" OD | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 |
| 52 | 115-20 | INSULATOR, 5/16" STUD x 13/16" OD | 4 | 4 | 4 | 4 | 3 | 4 | 2 | | 4 | 4 | | 3 | 3 | 3 | 4 | 4 | 3 | 4 | 4 | 3 | 3 | 4 | |
| 53 | 115-10 | INSULATOR, 1/4" STUD x 3/4" OD | | | | | | | | 4 | 4 | | 4 | | | | | | | | | | | | |
| 54 | 120-120 | FLAT METAL, NO. 10 STUD x 7/16" OD | 1 | 1 | 1 | 1 | | 1 | | | | | | | | | 2 | 1 | | | | | | 2 | |
| 55 | 120-189 | FLAT METAL, 5/16" STUD x 5/8" OD | 4 | 4 | 4 | 4 | 2 | 4 | 4 | 4 | 4 | 4 | 4 | 4 | 4 | 4 | 4 | 4 | 4 | 4 | 2 | 2 | 4 | 4 | 2 |
| 57 | 120-129 | FLAT METAL, 5/8" STUD x 1-1/4" OD | | | | | 2 | | 4 | 2 | 2 | 2 | 2 | 2 | 2 | 2 | 2 | 2 | 2 | 2 | 2 | 2 | 2 | 2 | 2 |
| 58 | 120-113 | SPLITLOCK, 1/4" | 3 | 3 | 3 | 3 | 3 | 3 | 3 | 3 | 3 | 3 | 3 | 3 | 3 | 3 | 3 | 3 | 3 | 3 | 3 | 3 | 3 | 3 | 3 |
| 60 | 120-26 | SPLITLOCK, 5/16" | 4 | 4 | 4 | 4 | 3 | 4 | 2 | 4 | 4 | 4 | 4 | 4 | 3 | 3 | 3 | 2 | 4 | 3 | 4 | 4 | 3 | 3 | 4 |
| 69 | 120-109 | FLAT METAL, 1/4" STUD | 1 | 1 | 1 | 1 | 1 | 1 | 2 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 |
| MISC. | | | | | | | | | | | | | | | | | | | | | | | | | |
| 45 | 120-227 | STRAP, LOCKING | 2 | 2 | 2 | 2 | 2 | 2 | 2 | 2 | 2 | 2 | 2 | 2 | 2 | 2 | 2 | 2 | 2 | 2 | 2 | 2 | 2 | 2 | 2 |
| 48 | 114-105 | COVER, REAR HOUSING | | | | | | | | | | | | | | | | | | 1 | | | | | |
| 57 | 120-287 | INSULATOR CAP | | | | | | | | | | | | | | 2 | 2 | 2 | | | | | 2 | 2 | |
| 50 | 111-18 | WASHER, BEARING SEAL | | | | | | | | | | | | | | 1 | 1 | 1 | | | | | 1 | 1 | |
| 51 | 102-4 | CAPACITOR, 8 mFd | | | | | | | | | | | | | | | | | | | | | | | |
| 52 | 111-76 | OIL SEAL, FELT | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 |
| 54 | 116-58 | CABLE AC TAP | | | | | | | | | | | | | | 2 | 2 | 2 | 1 | | 1 | | 2 | 2 | |
| 55 | 114-178 | PLATE ADAPTOR | | | | | | | | | | | | | | 1 | 1 | 1 | | | | | 1 | 1 | |
| 56 | 103-49 | GASKET | | | | | | | | | | | | | | 1 | 1 | 1 | | | | | 1 | 1 | |
| 51 | 102-26 | CAPACITOR, .5 mFd | | | | | | | | 1 | 1 | 1 | 1 | 1 | | | | | | 1 | | | | | |
| 39 | 120-352 | BUSHING, MTG FOOT | | | | | | | | | | | | | | | | | 1 | | | | | | |

Important: The information contained in this bulletin is intended for use by trained, professional technicians who have the proper tools, equipment, and training to perform the required maintenance described above. This information is NOT intended for 'do-it-yourselfers', and you should not assume that this information applies to your equipment. If you have any questions regarding this information please visit our website at www.prestolite.com, or contact our technical service department at: