

Source: Leece-Neville Heavy Duty Systems Division - Arcade, NY USA
Date: June 3, 2020
Bulletin No: TSB-1180
Models: M95307H Starter
Subject: IMS position on M95307H starter

Gear reduced starters typically have the IMS located on the starter with the connections to the rear of the device. (See Figure 1)

While this seems to be the normal configuration manufacturers use, the M95307H starter is designed with the connections at the opposite location. (See Figure 2)

The starter was designed this way to aid in the ease of installation of the starter to the vehicle's engine. **Do not relocate the IMS**

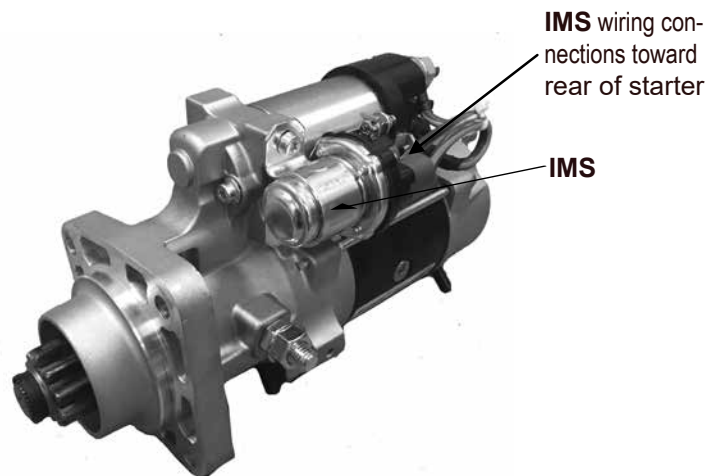


Figure 1

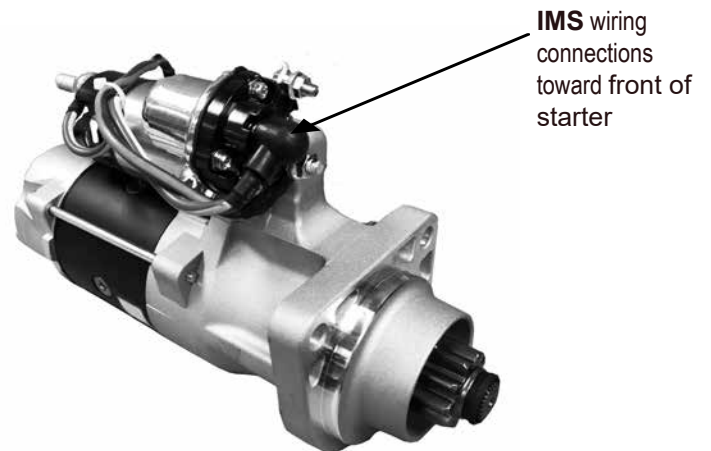


Figure 2

NOTE: For starter motor safety precautions please reference TSB-1166.

Important: The information contained in this bulletin is intended for use by trained, professional technicians who have the proper tools, equipment, and training to perform the required maintenance described above. This information is NOT intended for 'do-it-yourselfers'; and you should not assume that this information applies to your equipment. If you have any questions regarding this information please visit our website at www.prestolite.com, or contact our technical service department at: