

Source: Prestolite Electric Leece Neville Heavy Duty Systems

Bulletin No: TWB-0057 **Date:** December 13, 2021

Models: M105R CAT applications

Subject: Wiring Diagram




techservice@prestolite.com

This wiring diagram is suitable for the M105R models listed below, irrespective of mounting bracket and control relay (IMS) position.

All these models are ignition controlled via the vehicle 2-pin connector.

M105R3067SE
M105R3077SE
M105R3079SE
M105R3109SE
M105R3110SE
M105R3111SE
M105R3134SE
M105R3135SE
M105R3136SE
M105R3137SE
M105R3138SE
M105R3139SE
M105R3140SE
M105R3144SE
M105R3176SE

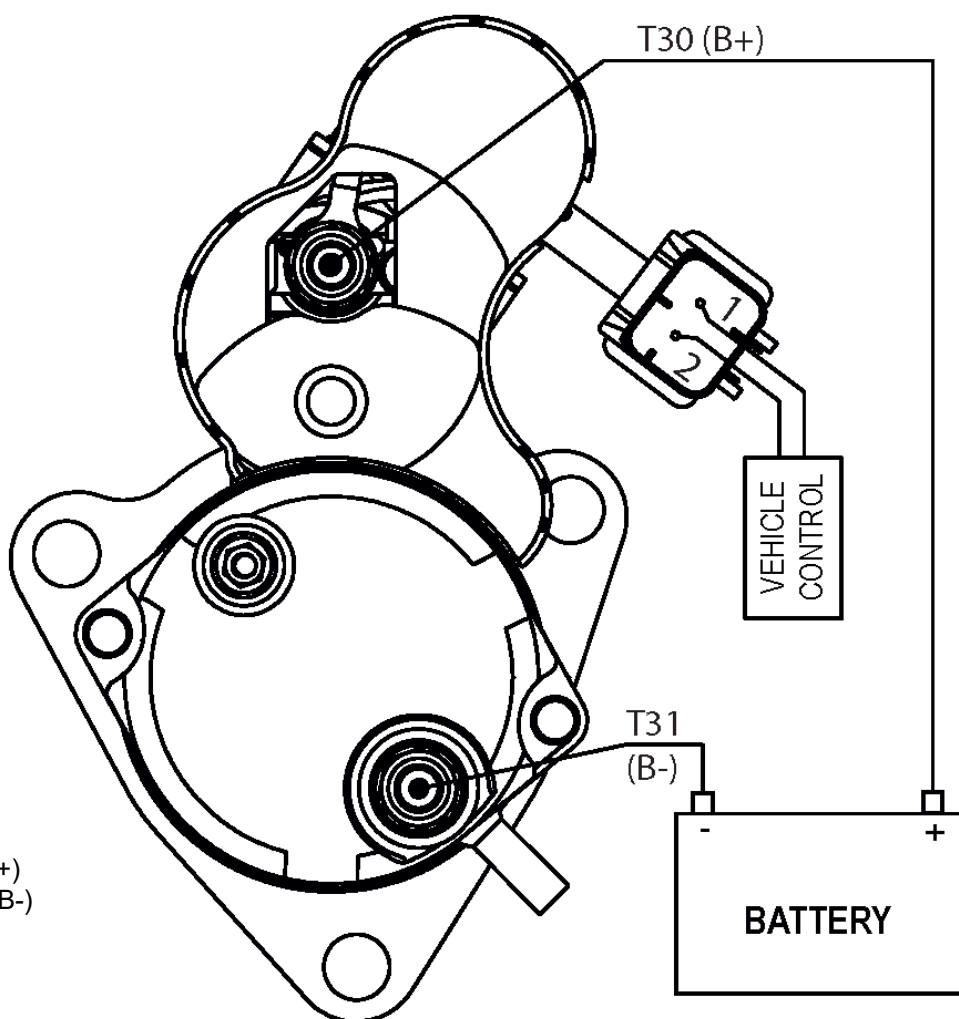

For bench test purposes
Pin 1 = Ignition supply (B+)
Pin 2 = Negative supply (B-)

Important: The information contained in this bulletin is intended for use by trained, professional technicians who have the proper tools, equipment, and training to perform the required maintenance described above. This information is NOT intended for 'do-it-yourselfers', and you should not assume that this information applies to your equipment. If you have any questions regarding this information please visit our website at www.prestolite.com, or contact our technical service department at:

Technical Service: techservice@prestolite.com

