

Source: Prestolite Electric Leece-Neville Heavy Duty Systems
Bulletin No: TSB-1208 **Date:** June 30, 2022
Models: M128 Starters
Subject: Jump start shroud removal



techservice@prestolite.com

Step by step procedure to remove and install jump start shroud.

Warning: The jump start shroud is attached to the starter with a plastic nut that is screwed onto the solenoid T45 terminal. Do not try to pry off as damage will occur.

Step 1:

Remove plastic nut holding the jump start shroud to starter.

Rotate in a counter clockwise direction. (Fig 1)

Step 2:

Remove plastic jump start cover. (Fig 2)

Step 3:

Install jump start shroud to the starter and install the plastic nut.

Rotate plastic nut in a clockwise rotation. Torque nut to 4-6 Nm.

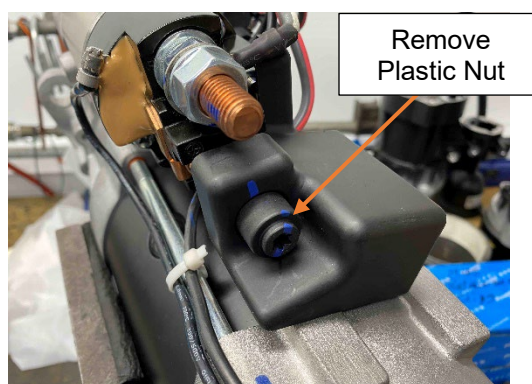


Fig 1

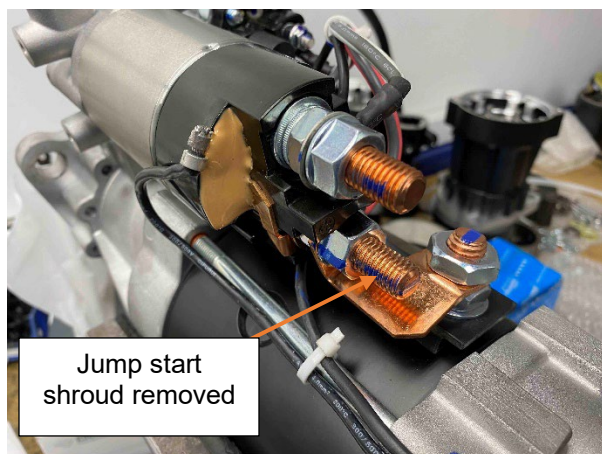


Fig 2

Important: The information contained in this bulletin is intended for use by trained, professional technicians who have the proper tools, equipment, and training to perform the required maintenance described above. This information is NOT intended for 'do-it-yourselfers', and you should not assume that this information applies to your equipment. If you have any questions regarding this information please visit our website at www.prestolite.com, or contact our technical service department at:

Technical Service: techservice@prestolite.com

