


Source: Leece-Neville Heavy Duty Systems Division - Arcade, NY USA  
Date: April 19, 2024  
Bulletin No: TSB-1136  
Models: MDA3927, MDA3929  
Subject: Wiring diagram

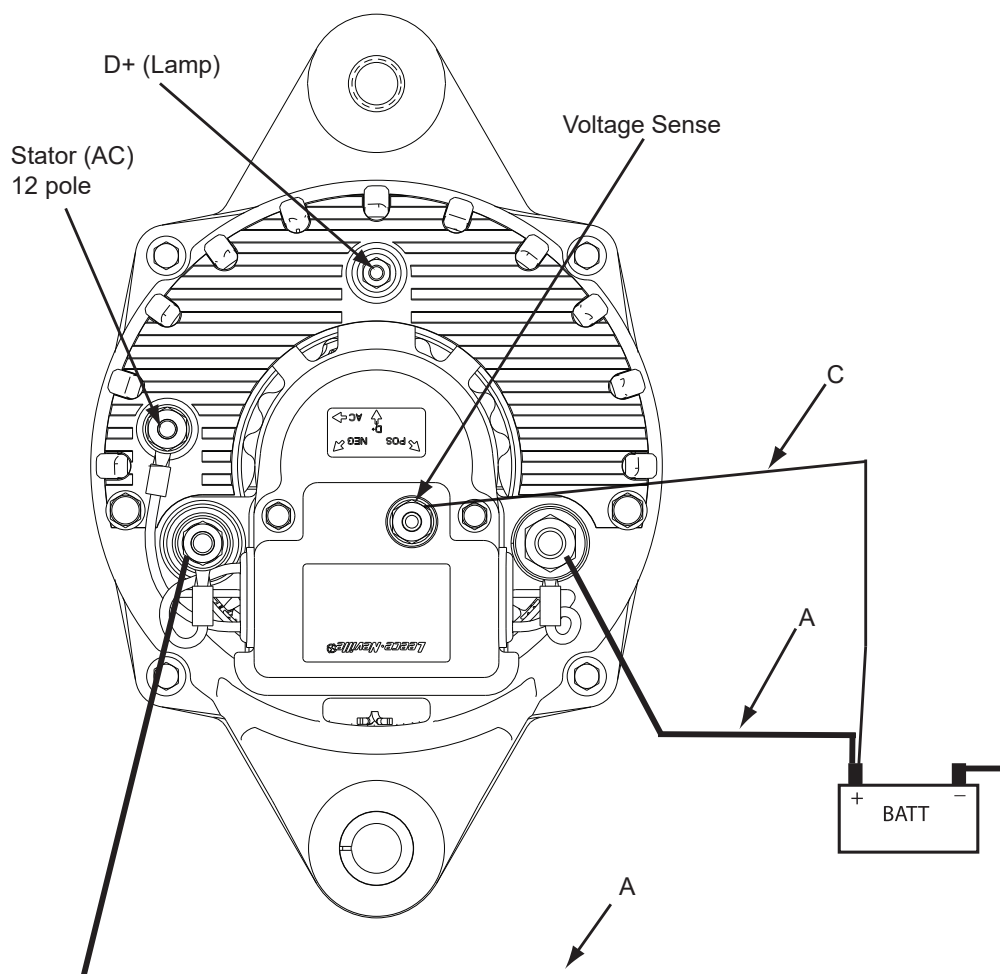


Note: If connection to remote sense terminal is lost, voltage will rise to approximately 30.5V.  
Connection to the remote sense terminal is mandatory.

This Technical Service Bulletin is intended to be used along with TSB-1001  
Recommended Wire Size Document

Important: The information contained in this bulletin is intended for use by trained, professional technicians who have the proper tools, equipment, and training to perform the required maintenance described above. This information is NOT intended for 'do-it-yourselfers'; and you should not assume that this information applies to your equipment. If you have any questions regarding this information please visit our website at [www.prestolite.com](http://www.prestolite.com), or contact our technical service department at:

Date: April 19, 2024

Bulletin No: TSB-1136

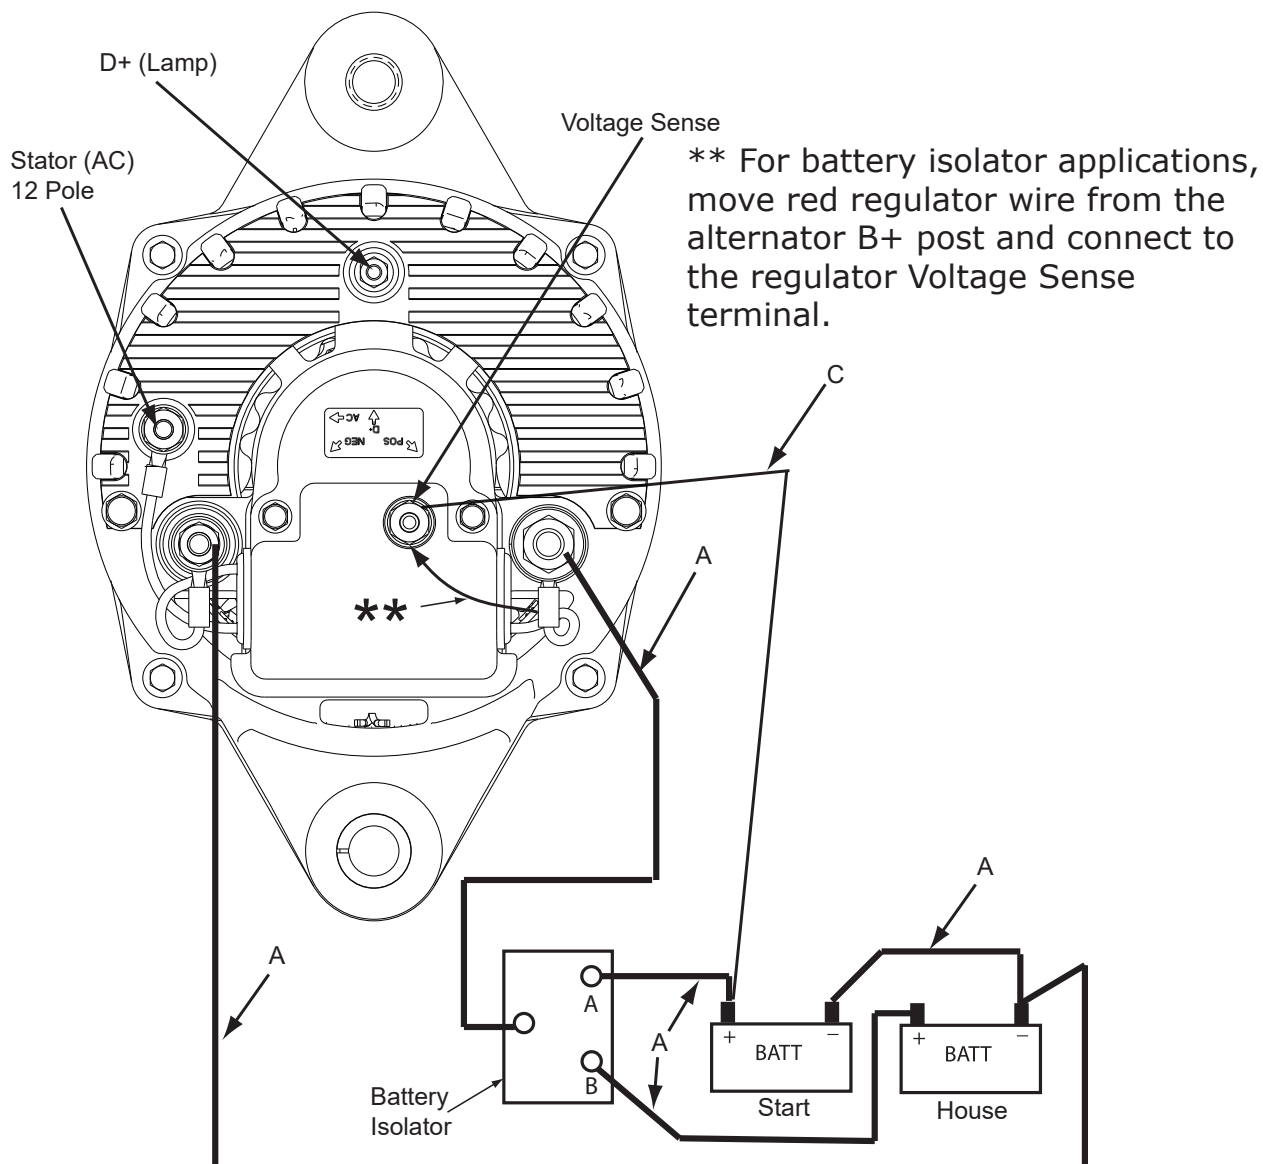

Note: If connection to remote sense terminal is lost, voltage will rise to approximately 30.5V.  
Connection to the remote sense terminal is mandatory.

This Technical Service Bulletin is intended to be used along with TSB-1001  
Recommended Wire Size Document

Important: The information contained in this bulletin is intended for use by trained, professional technicians who have the proper tools, equipment, and training to perform the required maintenance described above. This information is NOT intended for 'do-it-yourselfers', and you should not assume that this information applies to your equipment. If you have any questions regarding this information please visit our website at [www.prestolite.com](http://www.prestolite.com), or contact our technical service department at: