

Source: Leece-Neville Heavy Duty Systems Division – Arcade, NY

Bulletin No: TSB-1197

Date: December 7, 2023

techservice@prestolite.com

Models: BLD BLP4000 J-180 and Pad mount alternators

Subject: Procedure to convert to external regulation



Step by step procedure on how to install R214521511S remote regulator.

Note: For use with P type external regulators only.

Step 1:

Remove rear cover mounting screws
and terminal hardware. (Fig 1)
Remove rear cover.

Note: Keep all hardware removed in this step
as these will be reused.

Step 2:

Remove hardware attaching regulator to the
alternator. (Fig 2)
Remove regulator.

Fig 3. Shows regulator removed.

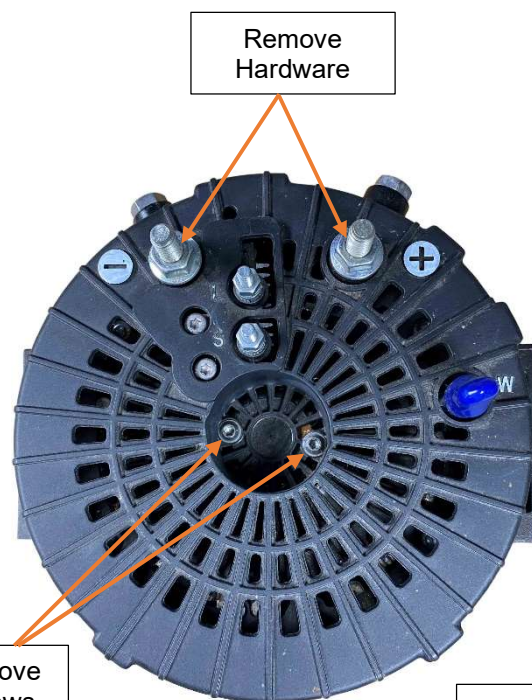


Fig 1

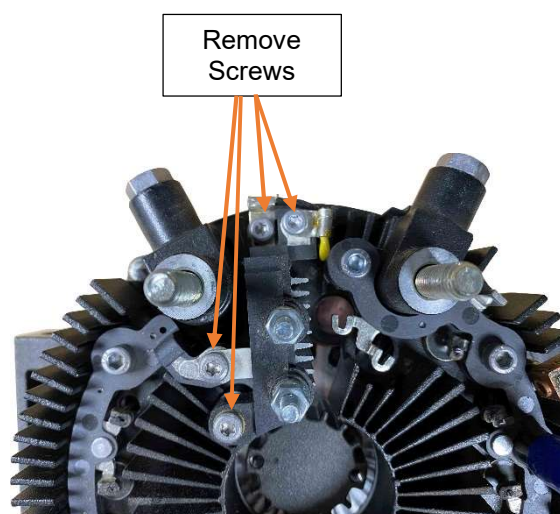


Fig 2



Fig 3

Important: The information contained in this bulletin is intended for use by trained, professional technicians who have the proper tools, equipment, and training to perform the required maintenance described above. This information is NOT intended for 'do-it-yourselfers', and you should not assume that this information applies to your equipment. If you have any questions regarding this information please visit our website at www.prestolite.com, or contact our technical service department at:



Bulletin No: TSB-1197

Date: December 7, 2022

Step 4:
Install R214521511S (Remote regulator) and
install mounting screws. (Fig 4)
Torque screws to 2–2.5 Nm.

Step 5:
Install rear cover
Torque 2 M4X12 rear cover mounting screws to
2 – 2.5 Nm. (Fig 5)

Install 2 M8 flange nuts. (Fig 5)

See TWB-0073 for proper wiring to external
voltage regulator.

Note: For use with P type external regulators
only.

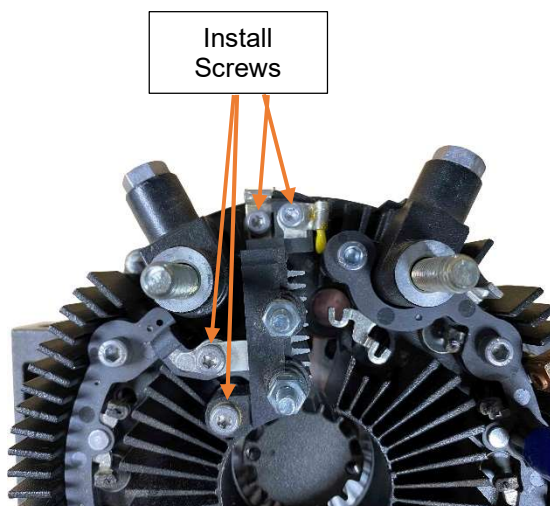


Fig 4

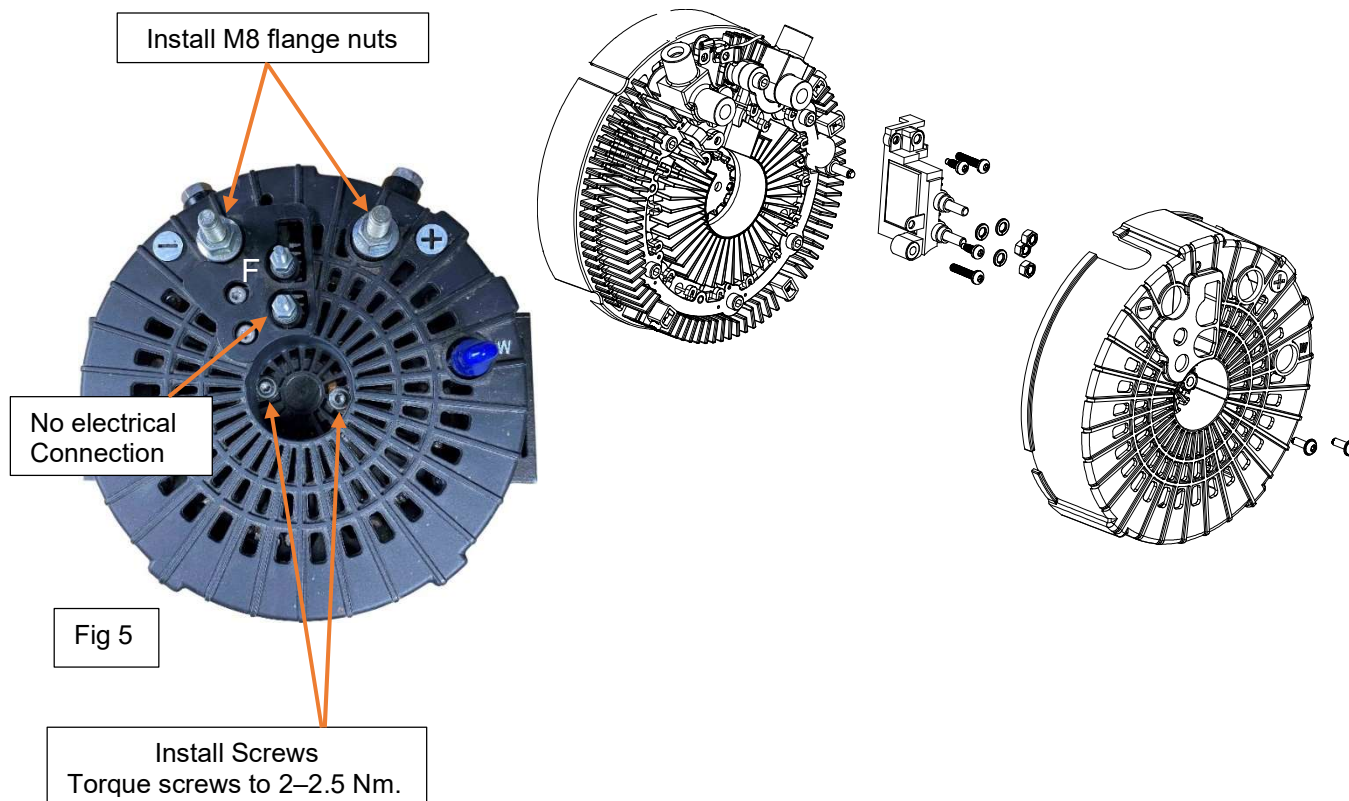


Fig 5

Important: The information contained in this bulletin is intended for use by trained, professional technicians who have the proper tools, equipment, and training to perform the required maintenance described above. This information is NOT intended for 'do-it-yourselfers', and you should not assume that this information applies to your equipment. If you have any questions regarding this information please visit our website at www.prestolite.com, or contact our technical service department at:

Technical Service: techservice@prestolite.com

