

Source: Prestolite Electric / Leece Neville Heavy Duty Systems

Bulletin No: TWB-0115 **Date:** September 17, 2024

Models: JFZ2710

Subject: Wiring Diagram



techservice@prestolite.com

Wiring diagram for JFZ2710 24V alternator

The alternator is an earth return / grounded machine.

B+ = Battery positive.


E = Earth (Ground)

D+ = Warning lamp (1.5 – 6W). Secondary / Alternative D+ lucar connection (Optional).

N = Tacho. Square wave output 0~28V. Frequency 3Hz/rev.

Terminal tightening torque values

B+	5 - 7 Nm
B- / D+ / N	3.2 – 3.8 Nm

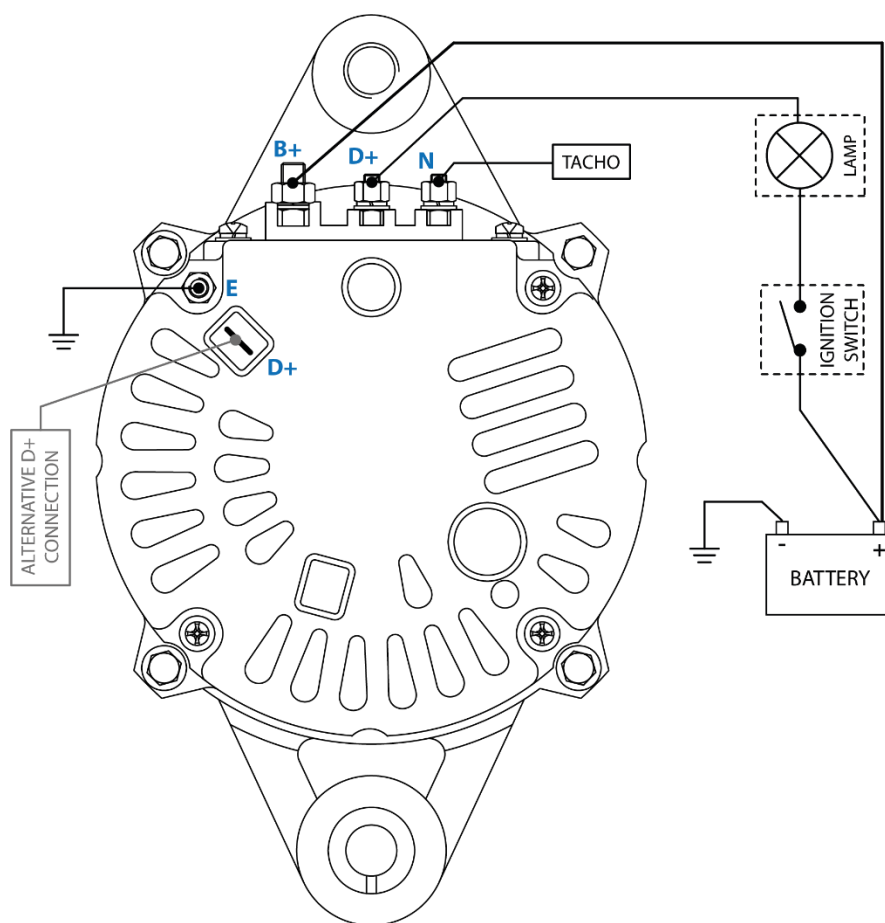

Important: The information contained in this bulletin is intended for use by trained, professional technicians who have the proper tools, equipment, and training to perform the required maintenance described above. This information is NOT intended for 'do-it-yourselfers', and you should not assume that this information applies to your equipment. If you have any questions regarding this information please visit our website at www.prestolite.com, or contact our technical service department at:



Technical Service: techservice@prestolite.com