


*This custom kit is manufactured by Snowbear Limited to fit:*

FORD F250 (Heavy Duty) MOUNT ASSEMBLY

(4x4) YEAR 1992 to 1998

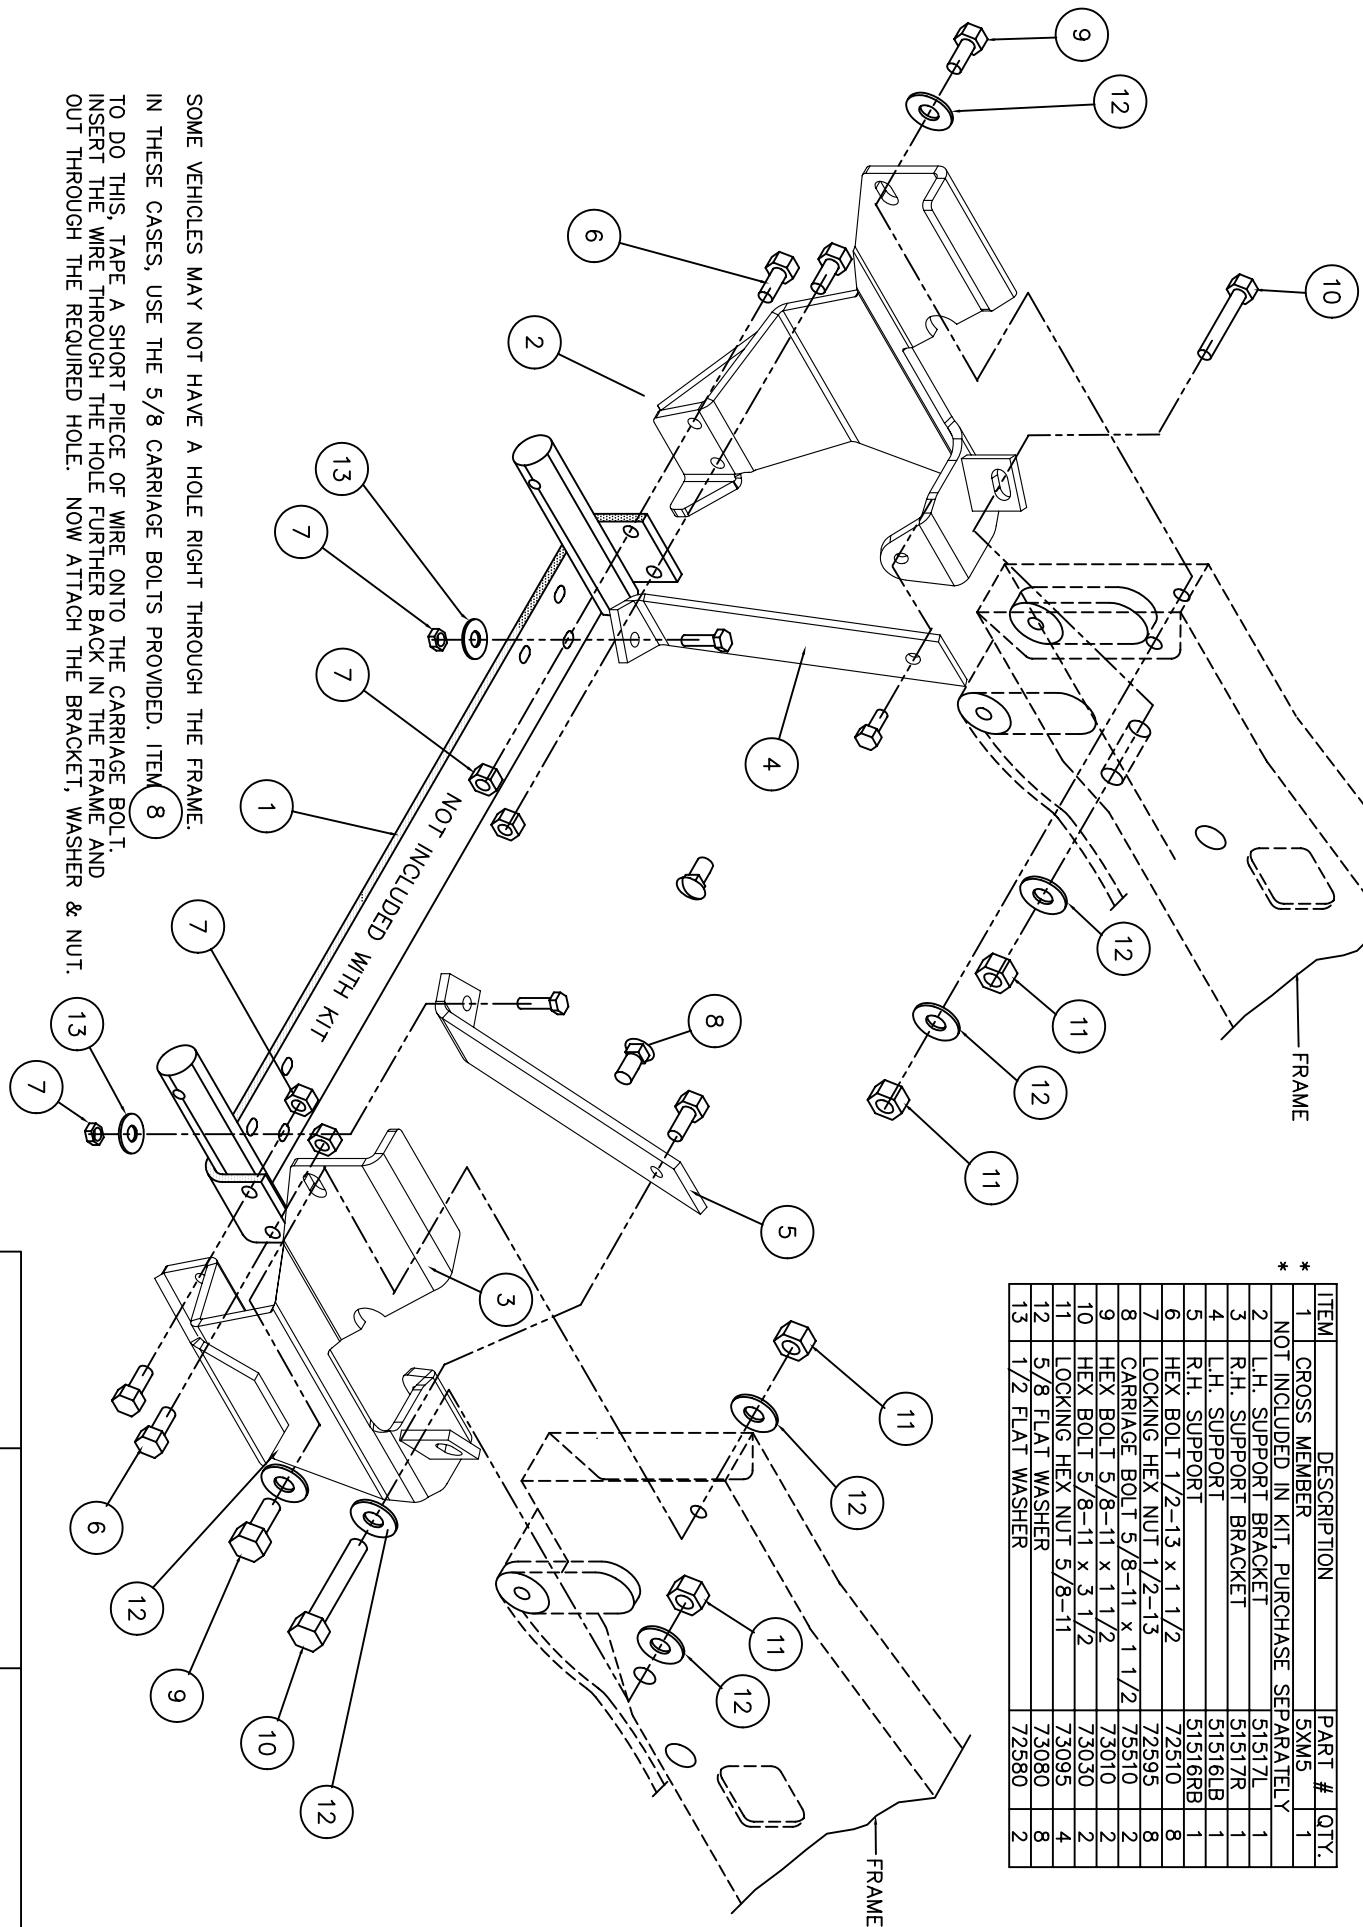

ITEM	DESCRIPTION	PART #	QTY.
* 1	CROSS MEMBER	5XM5	1
* NOT INCLUDED IN KIT. PURCHASE SEPARATELY			
2	L.H. SUPPORT BRACKET	51517L	1
3	R.H. SUPPORT BRACKET	51517R	1
4	L.H. SUPPORT	51516LB	1
5	R.H. SUPPORT	51516RB	1
6	HEX BOLT 1/2-13 x 1 1/2	72510	8
7	LOCKING HEX NUT 1/2-13	72595	8
8	CARRIAGE BOLT 5/8-11 x 1 1/2	73010	2
9	HEX BOLT 5/8-11 x 1 1/2	73010	2
10	HEX BOLT 5/8-11 x 3 1/2	73030	2
11	LOCKING HEX NUT 5/8-11	73095	4
12	5/8 FLAT WASHER	73080	8
13	1/2 FLAT WASHER	72580	2

SOME VEHICLES MAY NOT HAVE A HOLE RIGHT THROUGH THE FRAME. IN THESE CASES, USE THE 5/8 CARRIAGE BOLTS PROVIDED. ITEM 8 TO DO THIS, TAPE A SHORT PIECE OF WIRE ONTO THE CARRIAGE BOLT. INSERT THE WIRE THROUGH THE HOLE FURTHER BACK IN THE FRAME AND OUT THROUGH THE REQUIRED HOLE. NOW ATTACH THE BRACKET, WASHER & NUT.

NOT INCLUDED WITH KIT