


This custom kit is manufactured by Snowbear Limited to fit:
GM FULL SIZE - 1500, 2500, (NO SWAYBAR) MOUNT ASSEMBLY
(2 x 4) YEAR 1981 to 1987

JIMMY, BLAZER & SUBURBAN MOUNT ASSEMBLY
(2 x 4) YEAR 1981 to 1991

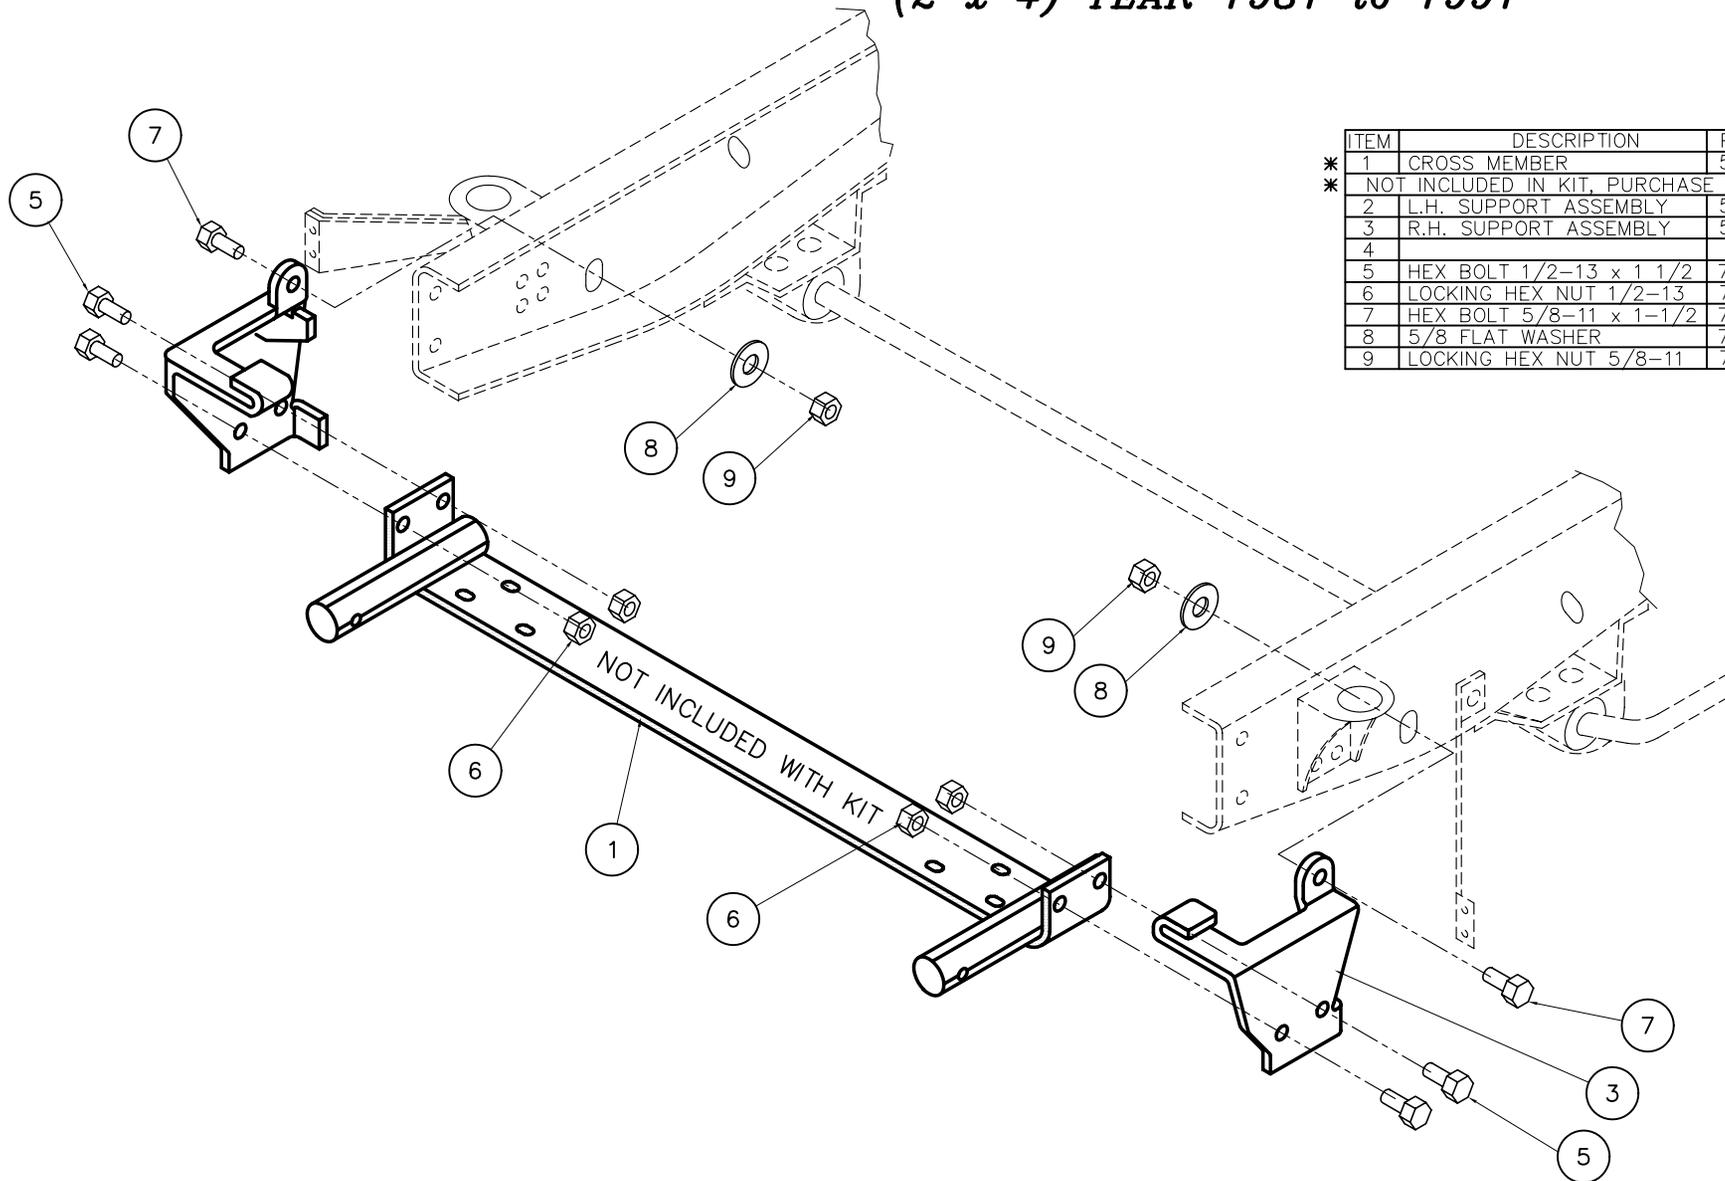

ITEM	DESCRIPTION	PART #	QTY.
* 1	CROSS MEMBER	5XM5	1
* 2	NOT INCLUDED IN KIT, PURCHASE SEPARATELY		
2	L.H. SUPPORT ASSEMBLY	52920L	1
3	R.H. SUPPORT ASSEMBLY	52920R	1
4			
5	HEX BOLT 1/2-13 x 1 1/2	72510	4
6	LOCKING HEX NUT 1/2-13	72595	4
7	HEX BOLT 5/8-11 x 1-1/2	73010	2
8	5/8 FLAT WASHER	73080	2
9	LOCKING HEX NUT 5/8-11	73095	2