


*This custom kit is manufactured by Snowbear Limited to fit:*

ISUZU RODEO MOUNT ASSEMBLY  
(4 x 4) 1998 and Newer

ITEM	DESCRIPTION	PART #	QTY.
* 1	CROSS MEMBER	5XM5	1
* NOT INCLUDED IN KIT. PURCHASE SEPARATELY			
2	L.H. SUPPORT ASSEMBLY	56109L	1
3	R.H. SUPPORT ASSEMBLY	56109R	1
4	METRIC BOLT M8 x 1.25 x 40	76225	4
5	HEX BOLT 1/2-13 x 1 1/2	72510	4
6	LOCKING HEX NUT 1/2-13	72595	4
7	HEX BOLT 3/4-11 x 1-1/2	73510	2
8	LOCKING HEX NUT 3/4-11	73595	2

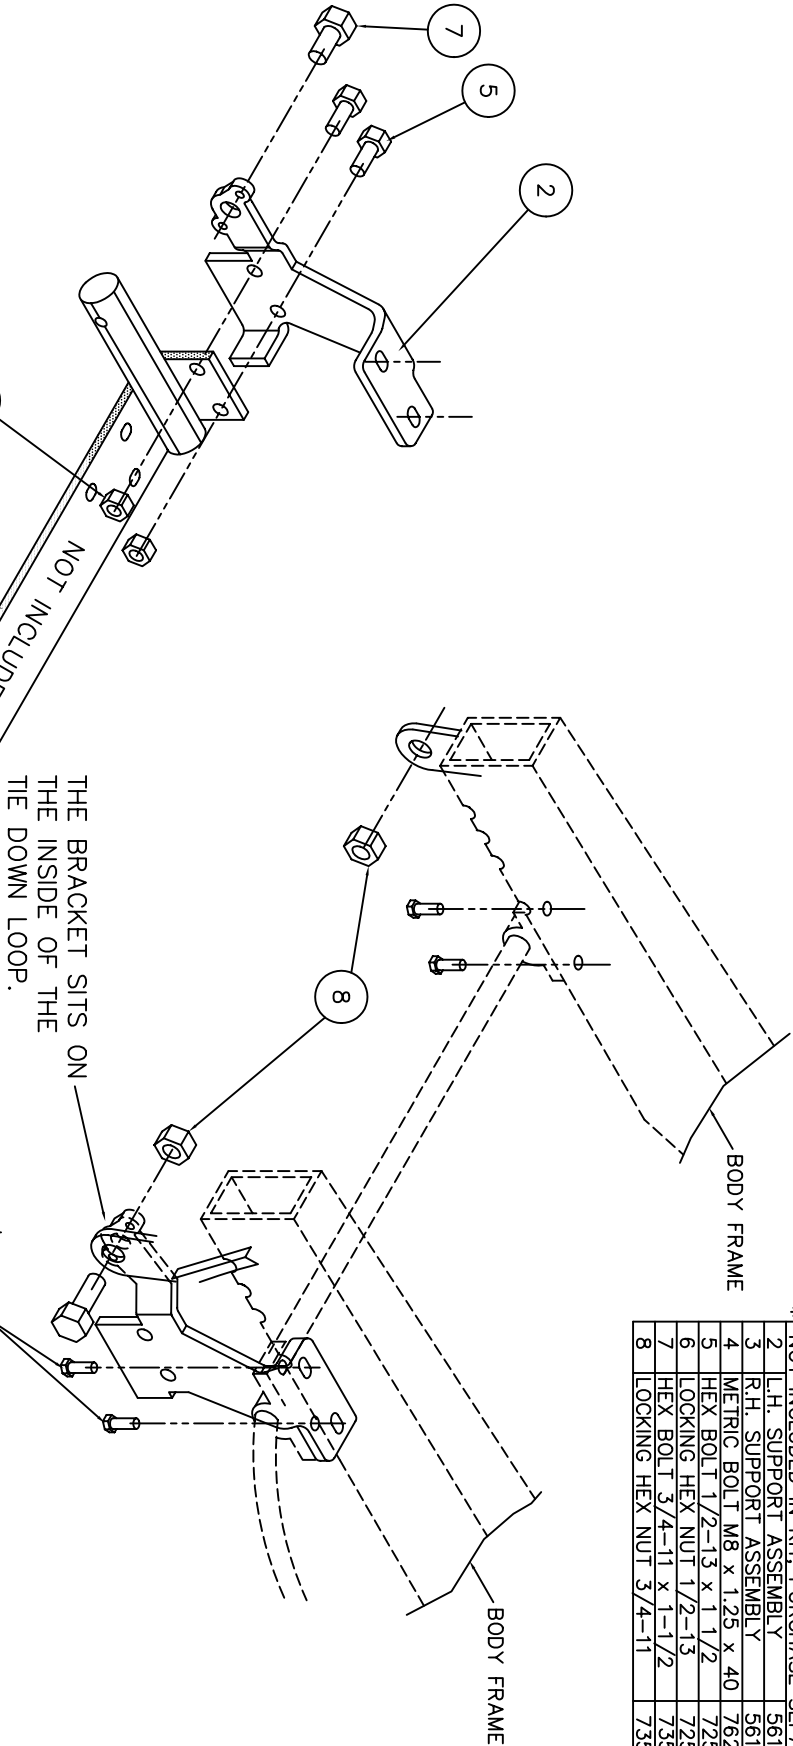

REMOVE THE SWAY BAR BOLTS, AND  
INSERT THE SUPPORT ASSEMBLY BETWEEN  
THE SWAY BAR BRACKET AND THE FRAME.  
USE THE NEW LONGER METRIC BOLTS TO  
REATTACH THE SUPPORT ASSEMBLY AND  
SWAY BAR BRACKET.

THE BRACKET SITS ON  
THE INSIDE OF THE  
TIE DOWN LOOP.

NOT INCLUDED WITH KIT