


GROUP:	17C
FORM:	8AR
FILE:	Alternator Parts List Section
DATE:	August, 1999

MODEL	VOLTS	AMPS
Various See Table		

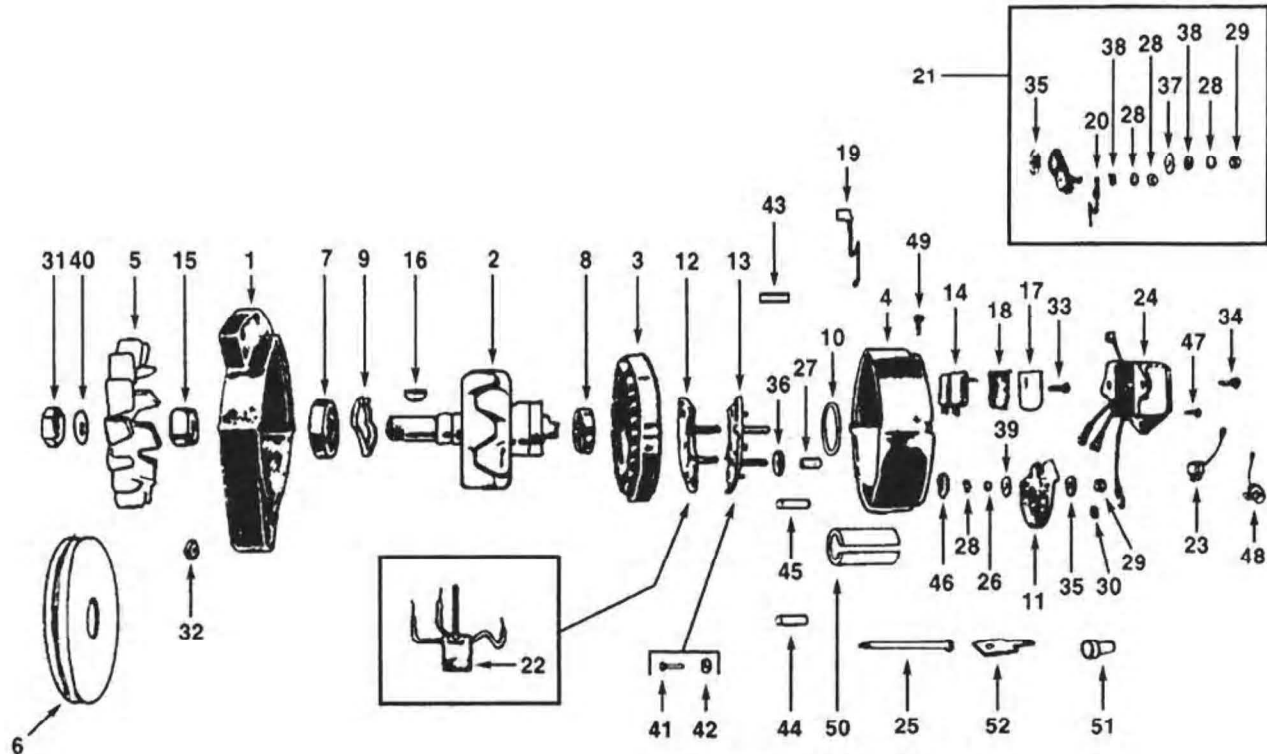


MODEL NO.	SALES NO.	1 HSNG FRONT	2 ROTOR ASSEM	3 STATOR ASSEM	4 HSNG REAR	5 FAN	6 PULLEY	7 BRNG FRONT	8 BRNG REAR	9 FR BRNG RET	10 R BRNG RET	12 DIODE REC NEG
8AR2015F	110-474	114-277	112-88	113-74	114-98	107-8		111-21	111-23	111-3	111-25	101-236
8AR2018L	110-683	114-1	112-90	113-71	114-98	107-8		111-21	111-23	111-3	111-25	101-236
8AR2062KA	110-495	114-6	112-89	113-75	114-98	107-8		111-21	111-23	111-3	111-25	101-236
8AR2160F	110-470	114-6	112-88	113-74	114-98	107-8		111-21	111-23	111-3	111-25	101-236
8AR2160FS	110-574	114-6	112-88	113-74	114-98	107-8	107-69	111-21	111-23	111-3	111-25	101-236

Important: The information contained in this bulletin is intended for use by trained, professional technicians who have the proper tools, equipment, and training to perform the required maintenance described above. This information is NOT intended for 'do-it-yourselfers', and you should not assume that this information applies to your equipment. If you have any questions regarding this information please visit our website at [www.prestolite.com](http://www.prestolite.com), or contact our technical service department at:

Leece-Neville Heavy Duty Systems  
7585 Empire Drive  
Florence, KY 41042

Phone/Fax: (866) 288-9853  
webmail@prestolite.com

GROUP:	17C
FORM:	8AR

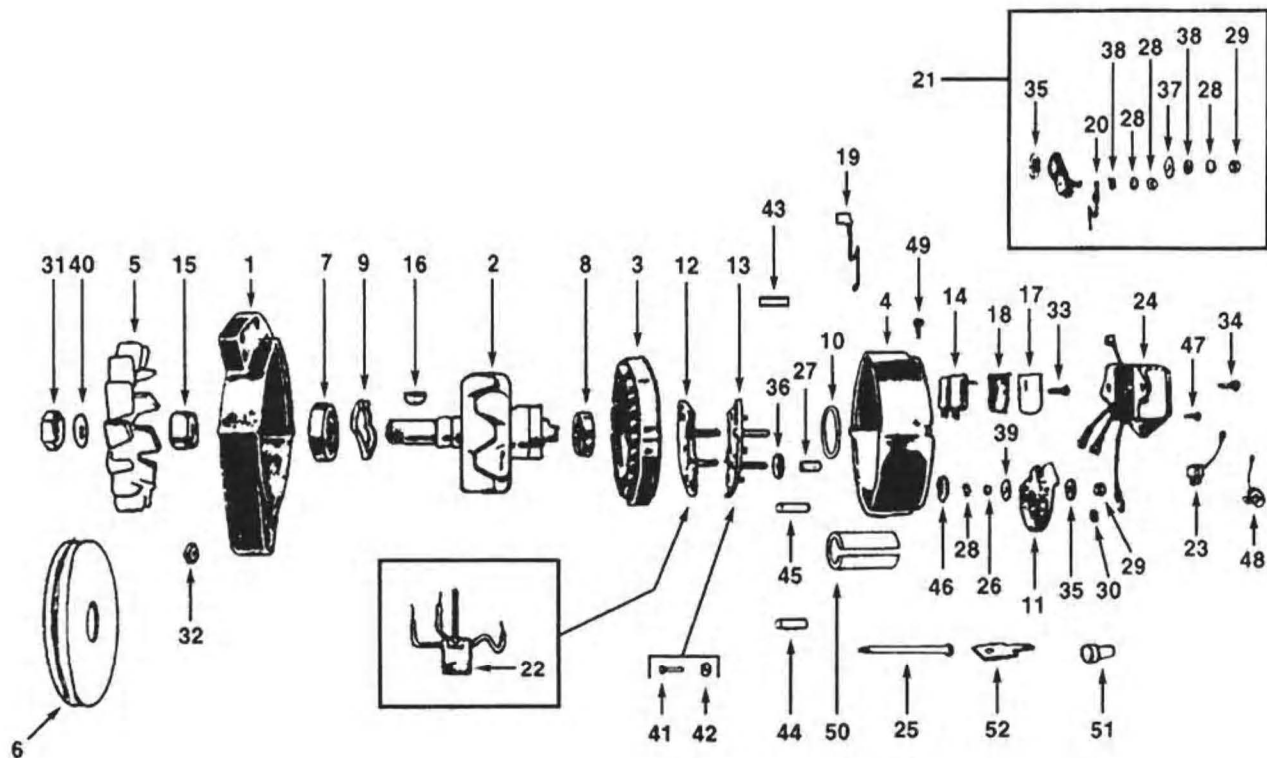

MODEL NO.	SALES NO.	13 DIODE REC. POS.	14 BRUSH ASSEM	15 SPACER FAN & PUL	16 WDRFF KEY 5	22 DIODE TRIO	24 VOLT. REG.
8AR2015F	110-474	101-241	103-39	120-375	120-7	101-130	105-307
8AR2018L	110-683	101-241	103-46	120-375	120-7	101-130	105-307
8AR2062KA	110-495	101-241	103-46	120-375	120-7	101-130	105-307
8AR2160F	110-470	101-241	103-46	120-375	120-7	101-130	105-307
8AR2160FS	110-514	101-241	103-46	120-375	120-7	101-130	105-307

Important: The information contained in this bulletin is intended for use by trained, professional technicians who have the proper tools, equipment, and training to perform the required maintenance described above. This information is NOT intended for 'do-it-yourselfers', and you should not assume that this information applies to your equipment. If you have any questions regarding this information please visit our website at [www.prestolite.com](http://www.prestolite.com), or contact our technical service department at:

GROUP:	17C
FORM:	8AR

KEY NO.	SALES NO.	DESCRIPTION	8AR2015F	8AR2018L	8AR2062KA	8AR2160F	8AR2160FS
		<b>BOLTS</b>					
25	120-1	THROUGH BOLT	4		4	4	
25	120-86	THROUGH BOLT		4			
25	120-143	THROUGH BOLT			4		
		<b>NUTS</b>					
30	120-342	HEX, 1/4-20 x 7/16 CON. LOCK	2	2	2	2	2
31	120-136	PULLEY MOUNTING, 5/8-18	1	1	1	1	1
32	120-376	HEX, 10-24, 1/8TK	5	5	5	5	5
28	120-95	HEX, 10-24 x 3/8	2	2	2	2	2
		<b>SCREWS</b>					
33	120-102	TAPPING, 8-32 x 1/2"	4	4	4	4	4
34	120-381	TAPPING, 4-40 x 7/32"	1	1	1	1	1
		<b>WASHERS</b>					
35	115-51	INSULATOR, NO. 10 x 1/2"	4	4	4	4	4
36	115-3	INSULATOR, NO. 10 x 3/4"	2	2	2	2	2
37	120-109	FLAT METAL, .266ID x .562OD	1	1	1	1	1
39	120-120	FLAT METAL, .203ID x .437OD	2	1	1	1	1
38	120-378	FLAT METAL, .203ID x .500D	3	3	3	4	4
40	120-137	SPLIT LOCK, 5/8" IRRIDITE	1	1	1	1	1
46	115-54	INSULATOR, 1/4" STUD	2	2	2	2	2
		<b>MISC.</b>					
42	115-7	INSULATOR, SQ. NO. 10 x 5/8OD	1	1	1	1	1
44	115-26	INSULATOR, SLEEVE 1/4"ID x 1/2"	1	1	1	1	1
45	115-27	INSULATOR, SLEEVE NO. 10 x 1/3"	2	2	2	2	2
51	120-287	CAP STUD	1	1	1	1	1

Important: The information contained in this bulletin is intended for use by trained, professional technicians who have the proper tools, equipment, and training to perform the required maintenance described above. This information is NOT intended for 'do-it-yourselfers', and you should not assume that this information applies to your equipment. If you have any questions regarding this information please visit our website at [www.prestolite.com](http://www.prestolite.com), or contact our technical service department at: